

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Equipment List**

<b><u>Component</u></b>	<b><u>Manufacturer/Model</u></b>	<b><u>State Fire Marshal Identification Number</u></b>
<b>Nozzle</b>	Healy Model 900 (Figure 1A-1)	005:027:028
<b>Tank Pressure Management System</b>	Healy Model 9961 Clean Air Separator (Figure 1A-2)	005:027:029
<b>Inverted Coaxial Hoses</b>	Healy Model 75B Series (3/4" I.D.) (Figure 1A-4) 75B-XXX-YZYZ where XXX represents hose length First two digits for length in feet Last digit - length in tenths of foot Y represents hose end type S = Swivel End F = Fixed End Z represents thread type 2 = Healy Straight Thread 3 = Metric Thread 4 = Balance-Type Thread	005:027:003
<b>Dispenser Conversion Adaptors</b>	Healy Model CX6-A Healy Model CX6-VV1A* Healy Model CX6-VV2A* Healy Model CX6-VV3A* (Figure 1A-5)  Note: Items marked with asterisk (*) are no longer manufactured, but may be used for dispenser retrofit.	005:027:019
<b>Reconnectable Breakaway Coupling</b>	Healy Model 8701VV (Figure 1A-6)	005:027:016

<u>Component</u>	<u>Manufacturer / Model</u>	<u>State Fire Marshal Identification Number</u>
<b>Flow Limiter<sup>1</sup></b>	Healy 1301 (Figure 1A-7)	005:027:020
<b>Pressure/Vacuum Valves</b>	Husky Model 4885	
<b>Dispenser Vacuum Pump</b>		
	Healy Model VP1000 Vacuum Pump	005:027:030
	Healy/Franklin Electric Model VP1000 Vacuum Pump (Figure 1A-3)	005:027:014
<b>Dispensers</b>	Note: Unihose dispensers shall be required unless as provided by Section 4.11 of CP-201.	
	Gilbarco Encore Series	001:026:016 001:026:017
	Healy Retrofit Kits VP1000R <sup>2</sup> or VP1000S <sup>3</sup>  (Figure 1A-8)	
	<u>Model #'s</u>	<u>Description:</u>
	NAO	Encore 1 Grade Multi-hose
	NA1	Encore 2 Grade Multi-hose
	NA2	Encore 3 Grade Multi-hose
	NA3	Encore 4 Grade Multi-hose
	NG0	Encore 3 Grade Single-Hose
	NG1	Encore 4 Grade Single-Hose plus 1
	NG4	Encore 2 Grade Single-Hose
	NJ0	Multi-hose Blender
	NJ2	Multi-hose Blender plus 1
	NL0 NL1 NL2 NL3	Encore X+1 Blender
	NN0 NN1 NN2 NN3	Encore X+0 Blender

<sup>1</sup> Flow limiter is mandatory when the flow rate is greater than 10 gallons per minute to comply with US EPA requirement.

<sup>2</sup> Kit used to install Healy components in Encore Balance series dispenser

<sup>3</sup> Kit used to install Healy components in Encore Assist series dispenser

<u>Component</u>	<u>Manufacturer / Model</u>	<u>State Fire Marshal Identification Number</u>
------------------	-----------------------------	---

GasBoy 9800 Series (Gilbarco)

Healy Retrofit Kit VP1000M<sup>4</sup>

(Figure 1A-9)

<u>Model #'s</u>	<u>Description:</u>
------------------	---------------------

9852 – Suffix1	Suffix2
----------------	---------

9853 – Suffix1	Suffix2
----------------	---------

Where:

Suffix1 can be:

A	=	Factory fabrication and assembly modifications to chassis
HC	=	High capacity model
M	=	Manifold supply inlet at the pumping unit inlet
TW1	=	Manifold supply inlet
TW2	=	Two individual supply inlets
X	=	Dispenser supplied by a submersible pump
Q	=	Utilizes an alternate meter and Pump

Suffix2 can be:

B	=	Battery back-up for electronics
C	=	Pump Interface
D	=	DC conduit and junction box
F	=	Fuel filter
G	=	Imperial gallons registration
H	=	High hose retriever
I	=	Internal hose retriever
L	=	Lighted panel
N	=	Equipped to handle a long spout nozzle
P	=	Satellite dispenser as part of the unit (for connection to a master pump)
PP	=	Solenoid valves (optional only on pumps)
R	=	Liters registration
S	=	Piping for connection to satellite
SS	=	Stainless steel panels

---

<sup>4</sup> Kit used to install Healy components in GasBoy 9800 series dispenser

<u>Component</u>	<u>Manufacturer / Model</u>	<u>State Fire Marshal Identification Number</u>
	SSA =	Equipped with stainless steel doors
	SSTS=	Stainless steel tops and doors
	T =	Mechanical totalizer
	U =	Submersible drive relays
	W =	Heater
	Y =	Vapor recovery ready
	Z =	Front Load Nozzle
	2 =	230 VAC/60hz operation
	3 =	230 VAC/60hz operation with 380VAC/60hz motor (available on all models except 9852Q)
	25 =	230VAC/50hz operation
	35 =	230VAC/50hz operation with 380VAC/50hz motor
	4 =	RS-485 interface
	5 =	50hz operation
	7 =	Electronic totalizer activator on both sides
	9 =	Provided with 900-R Series TopKat

#### Wayne Harmony Series

Healy Retrofit Kits VP1000N<sup>5</sup> or VP1000Q<sup>6</sup>

(Figure 1A-10)

Model #'s                      Description:  
prefix/VXXXYZ/suffix

Where:

prefix =	Any number or letter (with a possible "H" for Harmony)
V =	Vista
X =	Any digit
Y =	D or P
	D = remote dispenser type for delivering fuel
	P = suction pump for

<sup>5</sup> Kit used to install Healy components to Harmony Balance series dispenser

<sup>6</sup> Kit used to install Healy components to Harmony Assist series dispenser

<u>Component</u>	<u>Manufacturer / Model</u>	<u>State Fire Marshal Identification Number</u>
		delivering fuel
	Z =	1, 3, 4, 5, 6, 7 or 8
	suffix =	D1 or D2, and any combination of number(s) or letter(s)

#### Wayne Ovation Series

Healy Retrofit Kit VP1000P<sup>7</sup>

(Figure 1A-11)

Model #'s  
XYZ/ABC

Description:

Where:

X	=	B or R B = Blended Dispenser R = Regular Dispenser
Y	=	Number of hoses per side 1 = one hose per side 2 = two hoses per side
Z	=	Number of inlets per side 1 = one inlet 2 = two inlets 3 = three inlets
A	=	Number of grades 1 = one grade 2 = two grades 3 = three grades 4 = four grades 5 = five grades
B	=	Number of sides 1 = one side 2 = two sides
C	=	Number of columns 1 = one column 2 = two columns

<sup>7</sup> Kit used to install Healy components to Ovation Balance or Assist series dispenser

<u>Component</u>	<u>Manufacturer / Model</u>	<u>State Fire Marshal Identification Number</u>
	Wayne 3 Vista Series	005:019:001

Healy Retrofit Kit VP1000T<sup>8</sup>

(Figure 1A-12)

Model #'s                      Description:  
prefix/VXXXYZ/suffix

Where:

Prefix=                      Any number or letter

V                      =                      Vista

X                      =                      Any digit

Y                      =                      D or P

D = remote dispenser type for  
delivering fuel

P = suction pump for  
delivering fuel

Z                      =                      1, 3, 4, 5, 6, 7 or 8


Suffix=                      D1 or D2, and any combination of  
number(s) or letter(s)

---

<sup>8</sup> Kit used to install Healy components to Vista series dispenser


**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-1  
Healy Model 900 EVR Nozzle**

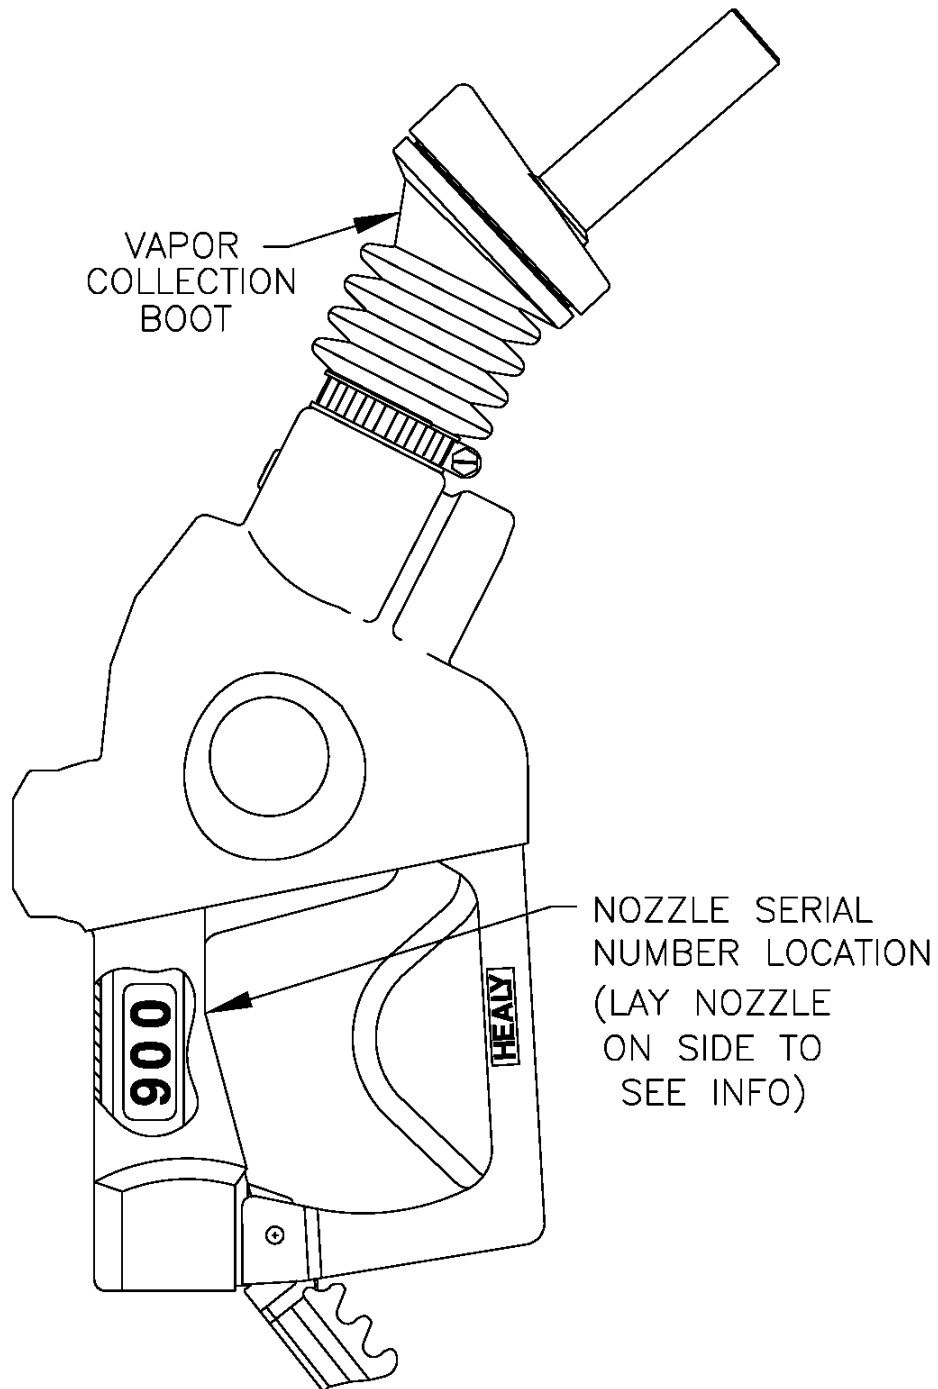

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**


**Exhibit 1  
Figure 1A-2  
Healy Model 9961 Clean Air Separator**

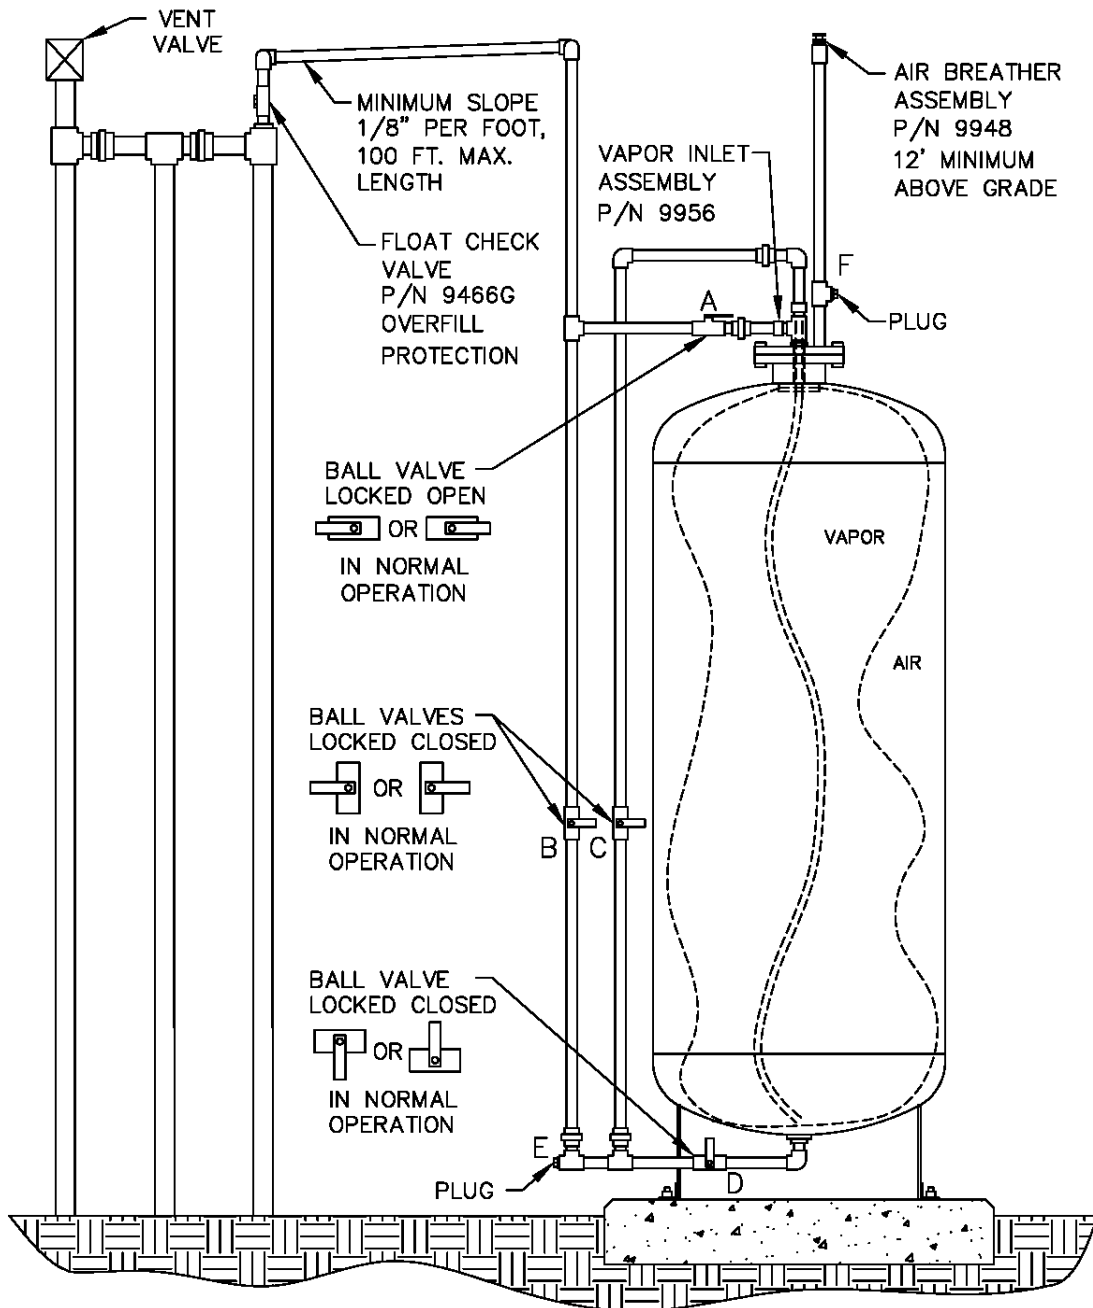




**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-3  
Healy Model VP1000 Vacuum Pump**

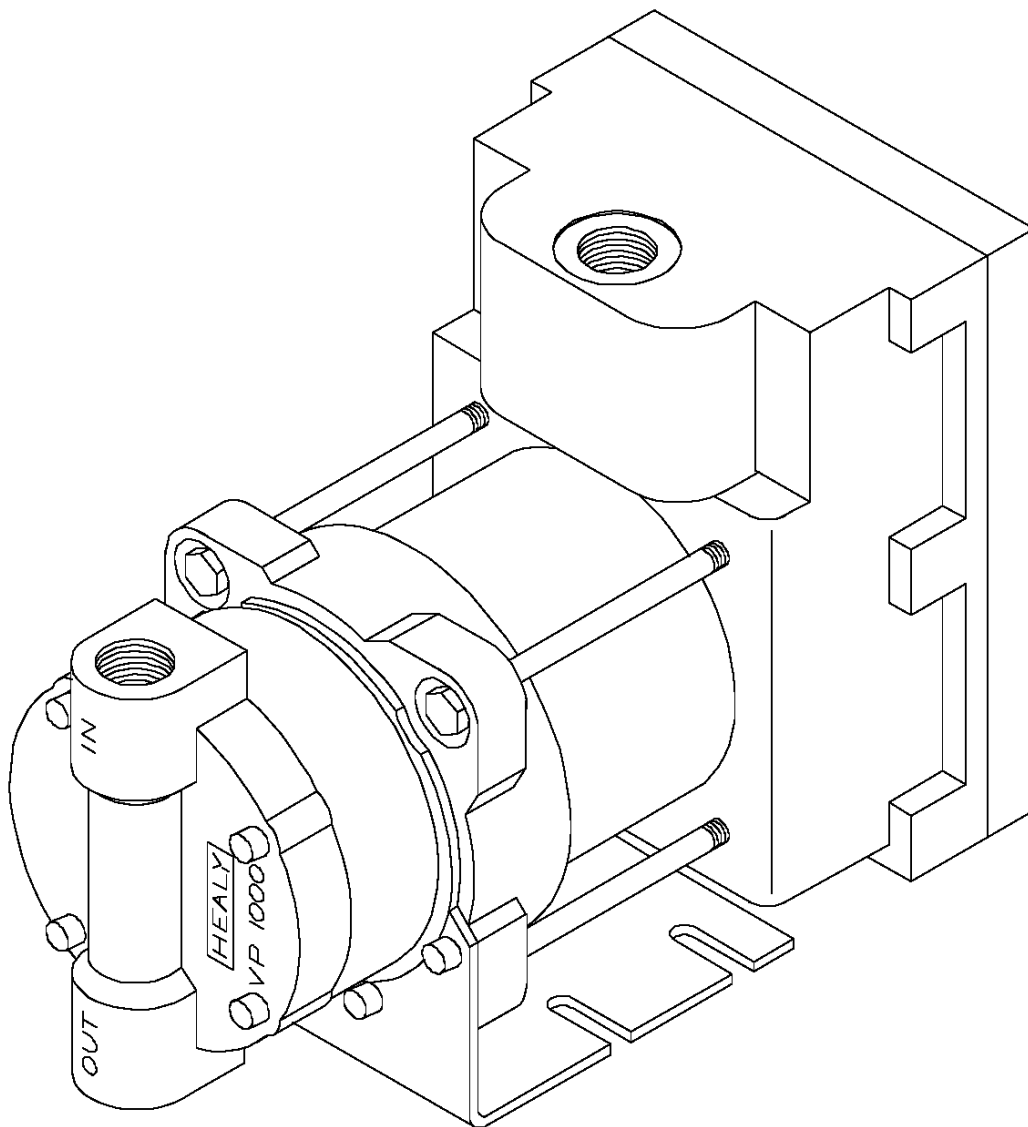


**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-4  
Hanging Hardware Selection Options**

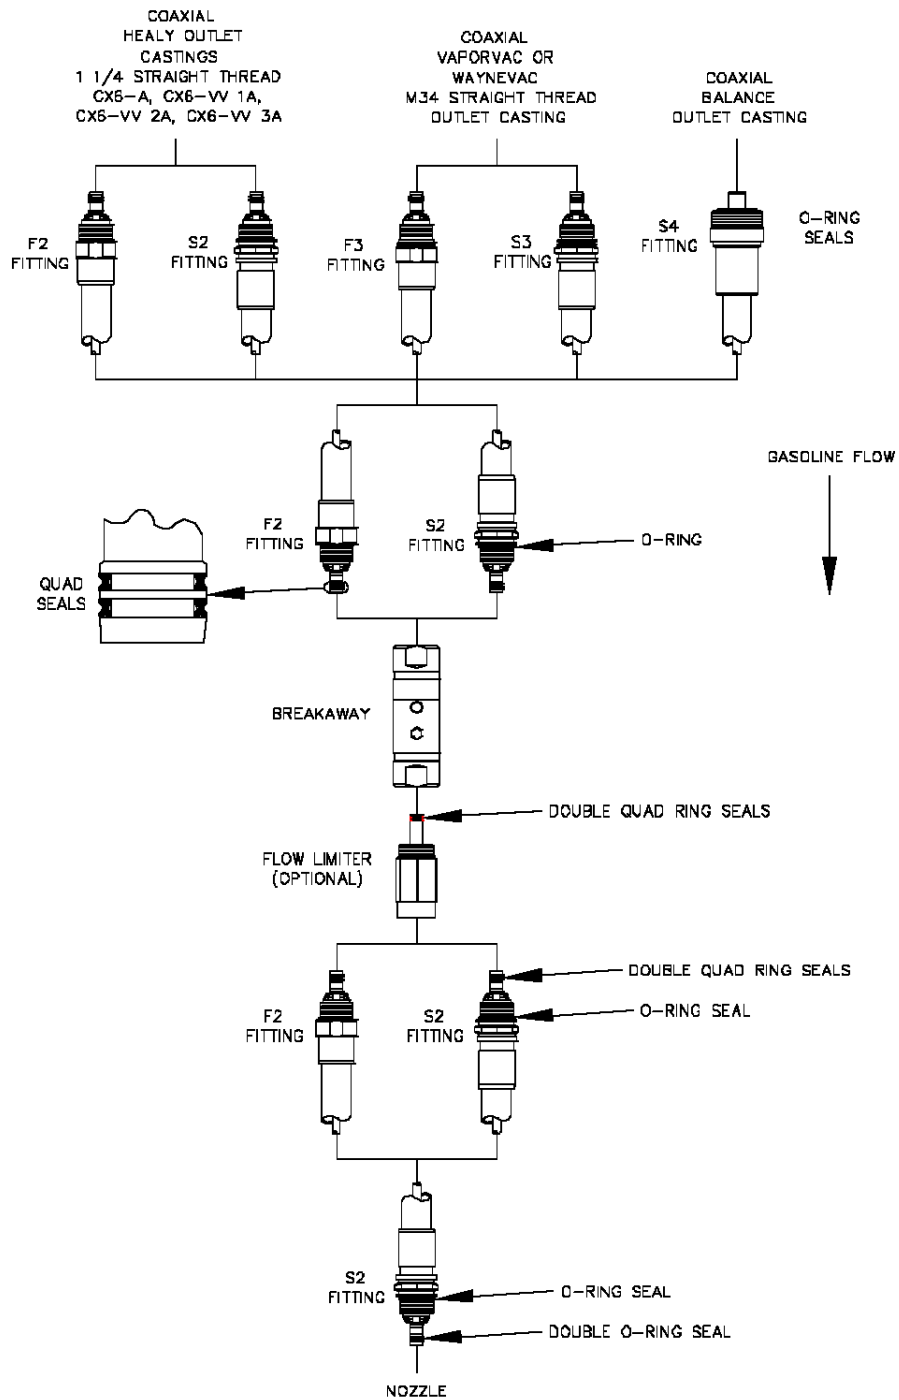


**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-5  
Healy Model CX6-A, CX6-VV1A, CX6-VV2A, CX6-VV3A  
Dispenser Conversion Adaptors**

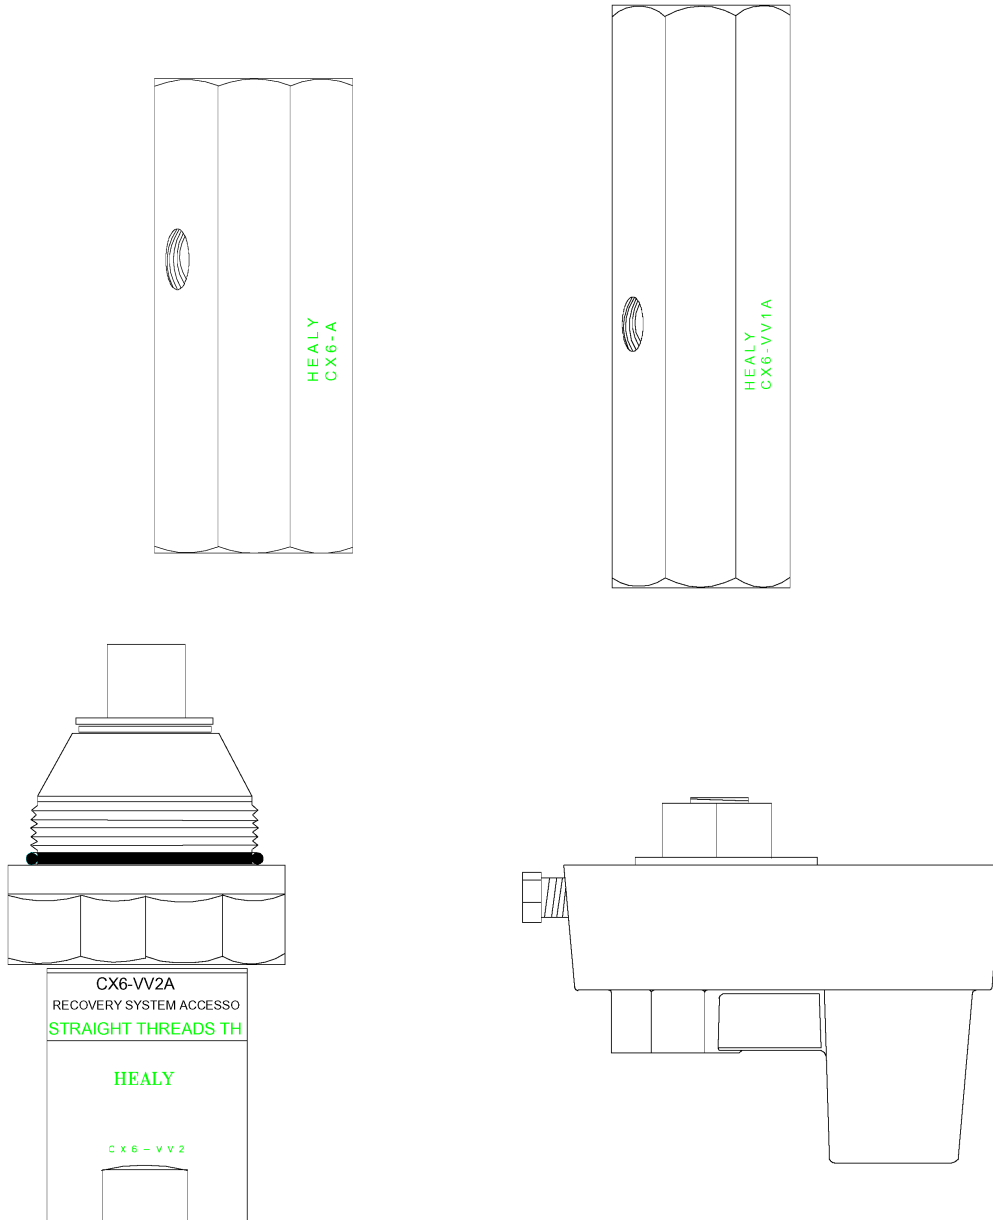

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**


**Exhibit 1  
Figure 1A-6  
Healy Model 8701VV Breakaway**

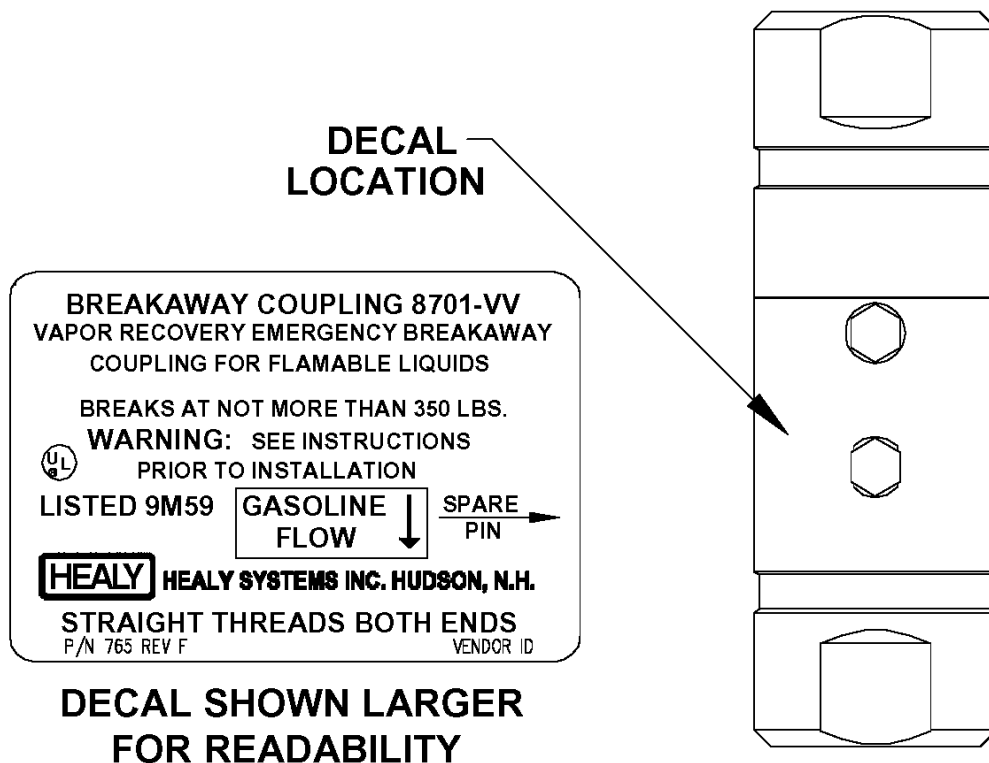

-13-

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**


**Exhibit 1  
Figure 1A-7  
Healy Model 1301 Flow Limiter**

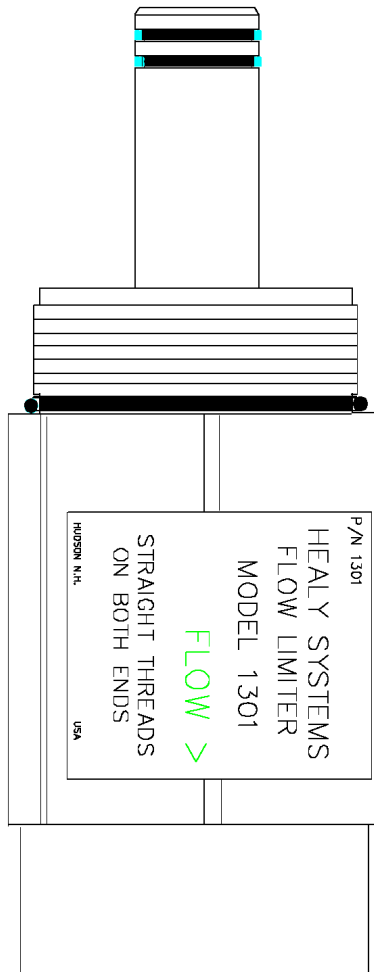

-14-

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**


**Exhibit 1  
Figure 1A-8  
Gilbarco Encore Series Dispenser**

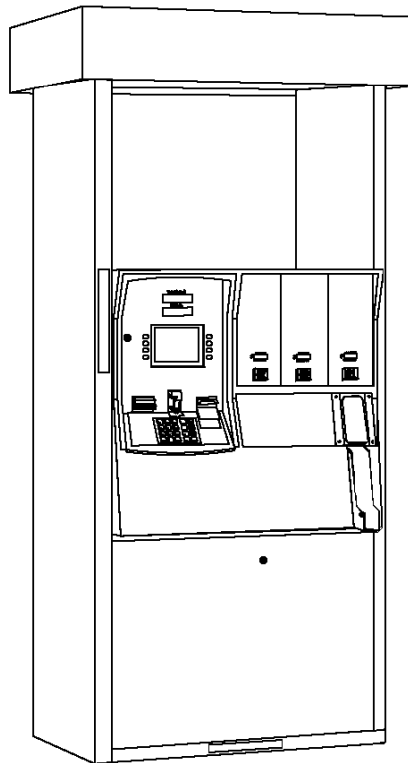

-15-

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-9  
GasBoy 9800 Series (Gilbarco) Dispenser**

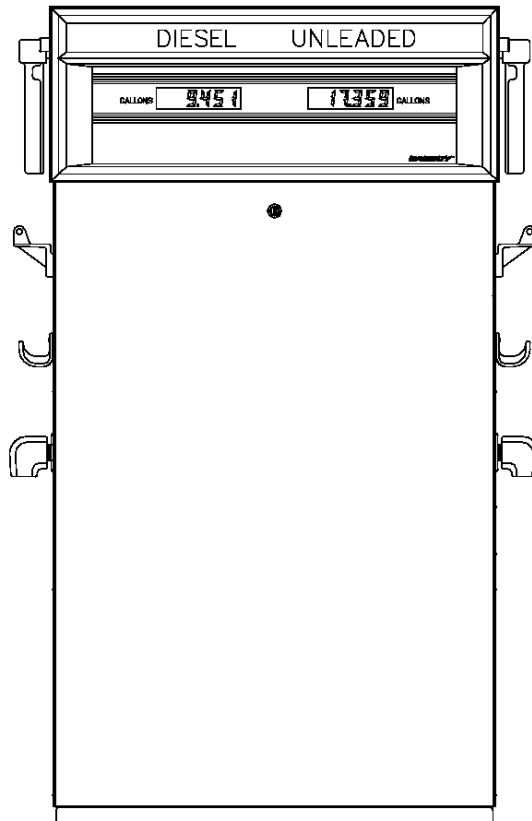

-16-

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-10  
Wayne Harmony Series Dispenser**





-17-

**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-11  
Wayne Ovation Series Dispenser**



**Executive Order VR-201-A  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-12  
Wayne Vista Series Dispenser**

